



# M5W RGB 三模键盘用户手册

M5W RGB Multi-mode RGB Mechanical Keyboard

User Manual

快速开始指南 ▶

 
Quick Start Guide

# 感谢您购买及使用本产品



为了给您带来更好的使用体验，在使用产品前请仔细阅读本说明书，并请妥善保管，以便日后参观。

## 包装内容

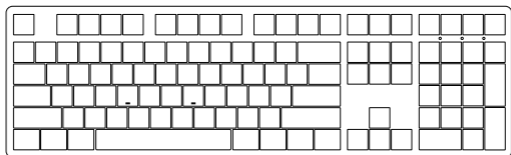

## 系统需求

Windows®XP / Vista / 7 / 8 / 10或更高版本

## 安装步骤

 
将键盘USB连接线插入电脑的USB接口即可开始使用。

## 独立指示灯

| 状态   | 指示灯位置 | 回连   | 配对   | 连接成功     |
|------|-------|------|------|----------|
| BT1  | 按键E灯  | 蓝色慢闪 | 蓝色快闪 | 蓝灯常亮2s熄灭 |
| BT2  | 按键R灯  | 蓝色慢闪 | 蓝色快闪 | 蓝灯常亮2s熄灭 |
| BT3  | 按键T灯  | 蓝色慢闪 | 蓝色快闪 | 蓝灯常亮2s熄灭 |
| 2.4G | 按键Y灯  | 绿色慢闪 | 绿色快闪 | 绿灯常亮2s熄灭 |
| 有线   | 按键U灯  | 无    | 无    | 红灯常亮2s熄灭 |

| 状态   | 指示灯位置  | 指示方式 |
|------|--------|------|
| 低电   | 独立指示灯3 | 白灯慢闪 |
| 充电   |        | 白灯常亮 |
| 充满   |        | 灯灭   |
| Num  | 独立指示灯1 | 白光常亮 |
| Caps | 独立指示灯2 | 白光常亮 |
| 锁Win | 左win键  | 白光常亮 |


## M5W RGB 组合键功能

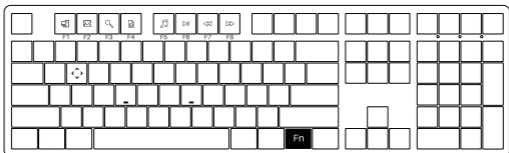

|     |    |             |
|-----|----|-------------|
| Fn+ | F1 | 我的电脑        |
|     | F2 | 电子邮件        |
|     | F3 | = Windows搜索 |
|     | F4 | 浏览器主页       |
|     | F5 | 多媒体播放器      |

|     |    |                         |
|-----|----|-------------------------|
| Fn+ | F6 | 播放 / 暂停                 |
|     | F7 | 上一首                     |
|     | F8 | = 下一首                   |
|     | W  | 将 WASD 与<br>↑ ↓ ← → 键对调 |

## M5W RGB 系统功能 (Windows)

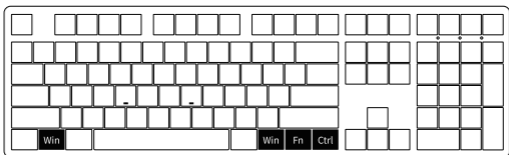 

### 锁Win键

Fn + 左Win

 
### 恢复出厂设置

长按 左Win + 右Win 5秒

### 切换菜单键

长按 Fn + 右Ctrl 3秒

## M5W RGB 系统功能 (Mac)

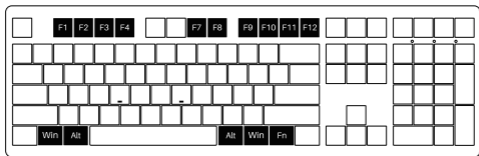

F1 降低显示屏亮度

F2 增加显示屏亮度

F3 开放任务控制

F4 呼出Siri

F7 向后跳 (音频)

F8 播放/暂停

F9 向前跳过 (音频)

F10 静音

F11 调低音量

F12 调高音量

左Win Option


左Alt Command

右Alt Command

Fn + (F1-12)

F1 ~ F12

## M5W RGB 灯光调节

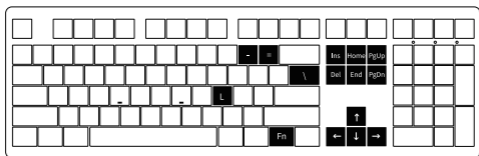 

Fn+- 灯光速度变慢

Fn+= 灯光速度变快

Fn+↑ 灯光变亮

Fn+↓ 灯光变暗

Fn+← 灯光方向向左

Fn+→ 灯光方向向右

Fn+L 灯光关闭/开启

Fn+Ins 常亮(默认)、流星、呼吸

Fn+Home 涟漪、如影随形、川流不息

Fn+PgUp 繁星点点、霓虹、光波、层出不穷


Fn+Del 彩泉涌动、峰回路转、百花争艳

Fn+End 极光、正弦波、雨滴

Fn+PgDn 斜风细雨、踏雪无痕、聚合、一石二鸟

Fn+\ 切换背光致7种单色+RGB循环

# M5W RGB 连接使用指南

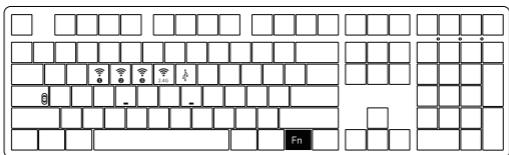 

|     |   |          |
|-----|---|----------|
| Fn+ | E | 蓝牙设备1    |
|     | R | 蓝牙设备2    |
|     | T | 蓝牙设备3    |
|     | Y | 2.4G无线设备 |
|     | U | 有线模式     |

|   |                   |
|---|-------------------|
| <br>开关位于<br>CAPS按键右侧 | 上：Mac (内置电源开)     |
|   | 中：Windows (内置电源关) |
|   | 下：Windows (内置电源开) |

## 蓝牙配对

键盘开机后，按下Fn+E/R/T进入蓝牙模式，长按Fn+E/R/T组合键3S，键盘进入对码状态，蓝色指示灯快闪，连上后指示灯常亮2S，如果没有连上设备指示灯熄灭，键盘进入睡眠。

## 2.4G配对

键盘开机后，按下Fn+Y进入2.4G模式，再按下Fn+Y组合键3S进入配对模式后，插入接收器，绿色指示灯快闪，配对成功后退出对码，模式灯常亮2S，找不到配对设备30s后，退出对码模式灯熄灭，键盘进入睡眠。

## 电量查询

在无线模式下，按Fn+空格组合键可检查电池电量。如果电池电量低于30%，数字1-2键将显示红灯。如果电池电量低于100%，数字1-9键将显示绿灯，电池电量充满则数字1-0键显示绿灯。

|       |       |       |       |       |       |       |        |    |   |
|-------|-------|-------|-------|-------|-------|-------|--------|----|---|
| 1     | 2     | 3     | 4     | 5     | 6     | 7     | 8      | 9  | 0 |
| 低于30% | 低于40% | 低于50% | 低于60% | 低于70% | 低于80% | 低于90% | 低于100% | 充满 |   |

亮红灯

亮绿灯

## 按键/灯光自定义说明和调用说明

1. 键盘三种工作模式下均可连接驱动并进行灯光和按键自定义
2. 键盘三种工作模式下可搭配驱动实现音乐律动
3. 请在我司官网下载“MonsGeek\_setup”驱动
4. 驱动下载地址[www.monsgeek.cn](http://www.monsgeek.cn)

## MONSGEEK保修和服务声明

1. MONSGEEK为中国大陆的客户提供一个保修。对于其他地区，请联系您的卖家（MonsGeek分销商）以了解具体的保修政策。
2. 如果保修期到期，客户需要支付维修费用。如果用户喜欢自己修理键盘，MonsGeek也会提供说明。用户应对自行修复过程中发生的任何损失承担全部责任。
3. 由于私自拆卸产品、使用不当和安装不当而导致的缺陷不在保修范围内。
4. 官方售后服务时间为每周一至周五上午10:00至下午18:00，节假日以国家法定节日休息为准。
5. 退货和保修政策在不同的平台上可能有所不同，并在购买时取决于具体的经销商。

公司：深圳银宸科技有限公司

地址：深圳市宝安区松岗街道碧头第一工业区朗碧路33号

电话：0755-23216420

网址：[www.monsgeek.cn](http://www.monsgeek.cn)

产地：中国·深圳

Company: Shenzhen Yinchen Technology Co., Ltd

Address: 33 Langbi Rd, Bitou First Industrial Zone, Bao'an District, Shenzhen, China



 
中国制造/Made in China

### 注意 事项

人为损坏不局限于键盘进水、高处坠落、过度用力拉扯线材等，键盘为电子产品，请按照电子产品保护方式爱惜使用。

To provide you with a better user experience, please read this manual carefully before using the product.

## Packing List

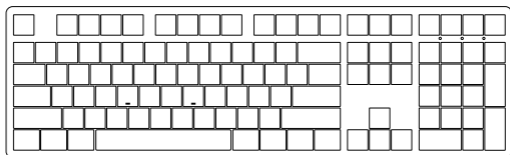

## System Requirement

Windows®XP / Vista / 7 / 8 / 10 or higher version

 
## Connectivity Method

Connect the keyboard to your computer by plugging in the USB cable into an available USB port to start using it.

## LED Indicators

| Status               | Indicator            | Re-Connecting             | Pairing                 | Connected   |
|----------------------|----------------------|---------------------------|-------------------------|---|
| Bluetooth device 1   | LED for Key E        | Blue light blinks slowly  | Blue light blinks fast  | Blue light stays on for 2 seconds and then turns off  |
| Bluetooth device 2   | LED for Key R        | Blue light blinks slowly  | Blue light blinks fast  | Blue light stays on for 2 seconds and then turns off  |
| Bluetooth device 3   | LED for Key T        | Blue light blinks slowly  | Blue light blinks fast  | Blue light stays on for 2 seconds and then turns off  |
| 2.4G wireless device | LED for Key Y        | Green light blinks slowly | Green light blinks fast | Green light stays on for 2 seconds and then turns off |
| Wired mode           | LED for Key U        | N/A                       | N/A                     | Red light stays on for 2 seconds and then turns off   |
| Status               | Indicator            | Color                     |                         |   |
| Low Battery          | Side LED Indicator 3 | White light blinks slowly |                         |   |
| Charge               |                      | Steady white              |                         |   |
| Fully Charged        |                      | LED OFF                   |                         |   |
| Num                  | Side LED Indicator 1 | Steady white              |                         |   |
| Caps                 | Side LED Indicator 2 | Steady white              |                         |   |
| Lock Win             | LED for Left Win Key | Steady white              |                         |   |


## M5W RGB HotKeys

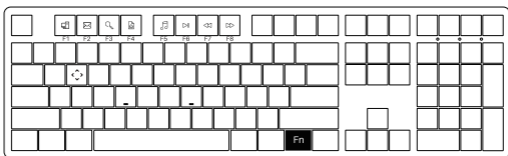

|     |    |                  |
|-----|----|------------------|
| Fn+ | F1 | My Computer      |
|     | F2 | E-mail           |
|     | F3 | = Windows Search |
|     | F4 | Browser Homepage |
|     | F5 | Media            |

|     |    |                           |
|-----|----|---------------------------|
| Fn+ | F6 | Play/pause                |
|     | F7 | Previous song             |
|     | F8 | = Next song               |
|     | W  | Swap WASD with<br>↑ ↓ ← → |

## M5W RGB System Commands (Windows)

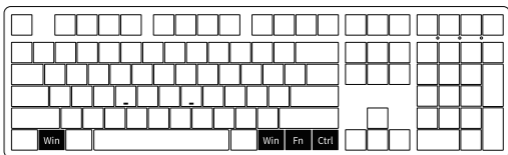 

### Lock Windows Key

Press Fn and  
left Win key

### Restore Factory Settings

 
Hold down left Win and  
right Win key for 5s

### Revert Ctrl into Menu Key

Hold down Fn and  
right Ctrl key for 3s



## M5W RGB System Commands (Mac)

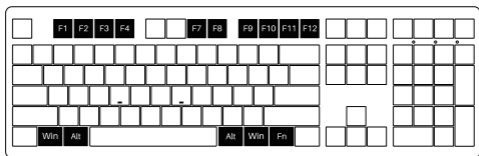

F1 Decrease display brightness

F7 Skip back (Audio)

F11 Volume down

F2 Increase display brightness

F8 Pause/Play (Audio)

F12 Volume up

F3 Open mission control

F9 Skip forward (Audio)

Left Win Option

F4 Activate Siri

F10 Mute


Left Alt Command

Right Alt Command

Fn + (F1-12)

F1 ~ F12

## M5W RGB Backlight Settings

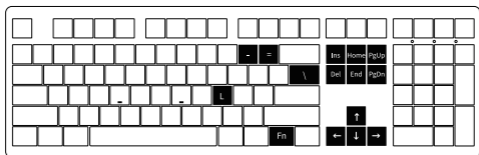 

Fn+- Slower Animation

Fn+Ins Effect 1、Effect 2、Effect 3

Fn+= Faster Animation

Fn+Home Effect 4、Effect 5、Effect 6

Fn+↑ Bright

Fn+PgUp Effect 7、Effect 8、Effect 9、Effect 10

Fn+↓ Dim

Fn+Del Effect 11、Effect 12、Effect 13

Fn+← Set Animation Direction to Left

Fn+End Effect 14、Effect 15、Effect 16


Fn+→ Set Animation Direction to Right

Fn+PgDn Effect 17、Effect 18、Effect 19、Effect 20


Fn+L Light Off/On

Fn+\ This shortcut allows you to set the backlight color to 7 single color with RGB loop effect

# M5W RGB Wireless/Wired Connection Guide

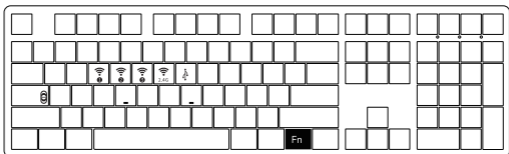 

|     |   |                      |
|-----|---|----------------------|
| Fn+ | E | Bluetooth Device 1   |
|     | R | Bluetooth Device 2   |
|     | T | Bluetooth Device 3   |
|     | Y | 2.4G Wireless Device |
|     | U | Wired Mode           |

|   |  |
|---|--|
| <br>The switch is located under the CAPS key | Top: Mac<br>(built-in power supply on)                 |
|   | Middle: Default Windows<br>(built-in power supply off) |
|   | Bottom: Windows<br>(built-in power supply on)          |

## Bluetooth Pairing

After turning on the keyboard, press FN+E/R/T to enter Bluetooth mode. Press and hold the Fn+E/R/T combination key for 3 seconds to put the keyboard in pairing mode, with the blue indicator light flashing quickly. Once the connection is established, the indicator light will stay on for 2 seconds. If the device fails to connect, the indicator light will turn off and the keyboard will enter sleep mode.

## 2.4G Pairing

After turning on the keyboard, press FN+Y to enter 2.4G mode. Then press and hold the Fn+Y combination key for 3 seconds to enter pairing mode. Then insert the receiver, and the green indicator light will flash quickly. Once pairing is successful, the LED indicator will stay on for 2 seconds. If no available device is found within 30 seconds, the LED indicator will turn off and the keyboard will enter sleep mode.

## Battery Level Check

Press the Fn + Space combination keys to check the battery level in wireless mode. If the battery level is below 30%, the LED for number keys 1-2 will show a red light. If it's between 30-100%, the LED for number keys 1-9 will show a green light. And when the battery is fully charged, the LED for number keys 1-0 will show a green light.



Red light

Green light

## Key/Lighting Effects Customization Instruction

1. The driver can be connected and lighting and key can be customized under the three working modes of the keyboard
2. Keyboard lighting can be coordinated with the driver to achieve audio visualizer
3. Please download the MonsGeek Driver on our website
4. Users can download the driver via [www.monsgeek.com](http://www.monsgeek.com)

## MONGEEK Warranty and Service Statement

1. MONGEEK provides One-Year warranty for customers in mainland China. For other regions, please contact your seller (MonsGeek distributor) for specific warranty policy.
2. If the warranty window expires, customers need to pay for repairs. MONGEEK will also provide instructions if users prefer to repair the keyboard by themselves. However, users shall take full responsibility for any loss happened during self-repair.
3. Defects resulting from disassembly of our product, improper usage and incorrect installation are not covered by warranty.
4. The return and warranty policy may vary in different platforms and are subject to the specific distributor at the time of purchase.

Company: Shenzhen Yinchen Technology Co., Ltd

Address: 33 Langbi Rd, Bitou Community 1st Industrial Zone, Bao'an District, Shenzhen, China

Tel: 0755-23216420

Website: [www.monsgeek.com](http://www.monsgeek.com)

Origin: Shenzhen, China



**WARNING:**  
Water and Beverages can't be  
poured into the Keyboard.



中国制造/Made in China

### Precautions

Man-made damage is not limited to immersion, falling off, and pulling off the wires with excessive forces, etc.

 MONSGEEK